



# QUICK REFERENCE CARD

## EXPS3



### MOUNTING

1. First, push the locking button inward, then turn the quick detach lever so it is away from its closed position in the base of the sight.
2. The sight contains a small cross bolt that rests in the groove of the rail. Place sight into the desired position on the rail.
3. Push the sight as far forward in the groove as possible and close the quick detach lever so it is fully shut.
4. If the sight is too tight or too loose, open the lever, turn the adjustment nut opposite the quick detach lever clockwise for a tighter fit, and counterclockwise to loosen the fit to accommodate wider rail tolerances. Do not perform this task with the lever closed.

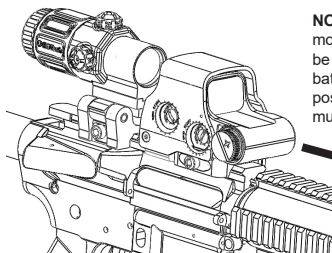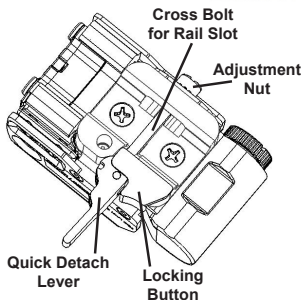

**NOTE:** For all HWS models, the sight should be mounted with the battery compartment positioned closest to the muzzle.


### Notes

For an electronic PDF copy of the EXPS3 user manual, please visit our website at:

<http://www.eotechinc.com/hws-service-and-support/product-manuals>



### Control Buttons

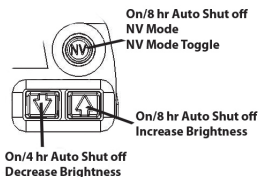

### Warranty

All EOTech HWS models offer a 10 year limited warranty from the date of purchase. Contact EOTech Customer Service for details.

# QUICK REFERENCE CARD

## EXPS3



### BRIGHTNESS CONTROLS:

Push button controls allow the operator to adjust user settings for preferred conditions. Starting with the sight off, if either the up or down buttons are pressed, the sight will turn on at level 12 out of 20 daytime settings. To change the brightness of the reticle, either push the up or down arrows consecutively until the desired level is achieved, or simply hold down the button to scroll to the setting. Pressing the NV button will drop the reticle into IR mode (for use with Night vision devices) at level 4 out of 10. Scroll up or down to achieve desired brightness. Press the NV button again to move back into day settings. Press both buttons simultaneously to power the sight off.

### AUTO SHUTDOWN:



If the UP control button is used to turn the sight on, the sight will shut off automatically at 8 hours, if the DOWN button was used to turn the sight on, the sight will power off after 4 hours. Shut down time resets every time a button is pushed.

### BATTERY LIFE INDICATION

The reticle will pulse when initially powered on if the battery has minimal useful life left. Battery life check only occurs when the sight is powered on from an off state.

### BATTERY REPLACEMENT:

Rotate the cap counterclockwise to access the battery for replacement. For proper battery compartment seal, re-install and tighten the cap clockwise to a hard stop. The use of a coin or other common tool should be used if necessary.

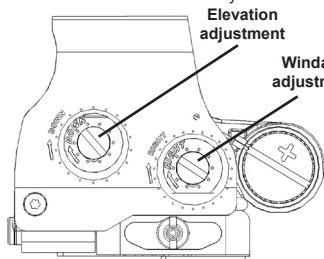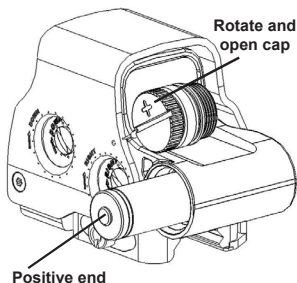

### ZEROING PROCEDURE:

1. Choose desired zero distance. Starting at 25 yards will make the initial process easier.
2. For both windage and elevation, each click will change the sights point of aim approx. 1/2 inch at 100 yards when zeroing.
  - 1/8 inch at 25 yards.
  - 1/4 inch at 50 yards.
  - 1/2 inch at 100 yards.
3. Choose a target.
4. Place the aiming dot on the target and fire 3 rounds.
5. Note the average distance between the Point of Aim (POA) and Point of Impact (POI).
6. Turn the windage and elevation adjustments accordingly to bring the POI in closer to your POA. Fire another (3) round set, and continue to make adjustments until all (3) shots correspond to your POA.

### ADJUSTING RETICLE

1. To move the point of impact UP, turn the elevation adjustment counterclockwise.
2. To move the point of impact LEFT, turn the windage adjustment counterclockwise.