



LIGHTWEIGHT PROTECTION

dps

DIGITAL PHOTO SERIES



123-G0-30

Sling-Backpack

Order Code: KT-123-G0-30



Backpack



Left Sling



Right Sling



Right Sling

For right handed photographers



- 1 Hold green shoulder strap in your left hand.



- 2 Swing bag over your left shoulder across your chest.



- 3 Pull lower buckle strap to adjust the shoulder strap length.



- 4 When adjusted correctly, the bag will sit straight along your back.



Left Sling

For left handed photographers



- 1 Hold **black** shoulder strap in your **Right** hand.



- 2 Swing bag over your **right** **shoulder** across your chest.



- 3 Pull lower buckle strap to adjust the shoulder strap length.



- 4 When adjusted correctly, the bag will sit straight along your back.



Backpack

For long distance carrying



- 1 Pull each shoulder strap out of the concealment sleeve



- 2 Connect left shoulder strap to left hip buckle. Do the same on the other side.



- 3 Pull lower buckle straps to adjust the shoulder strap length.



- 4 For additional comfort, connect the hip belt.



X-Position

Long distance carrying and Quick Draw option



⇒ To switch to X-position from sling position, do the following:



1 Pull unused shoulder strap from concealment sleeve and attach to hip buckle on the opposite side.



2 Arrange straps so they sit comfortably on your chest.



3 To move back to quick draw position, simply release one of the hip buckles.



Frontal Quick Draw

(Works on both shoulders)



- ❶ Swing the bag to frontal position.



- ❷ Release the buckle.



- ❸ Pull flap open.



- ❹ Quick draw your camera.



Zipper fully closes to secure compartment.



Leave tab out to enable quick draw function.



Internal Setup

How to arrange your gear within



- 1 Choose which opening side is comfortable for drawing the camera (left or right).



- 2 Organize primary gear according to the side chosen above. Store secondary gear in the remaining space, access from the other side.



- 3 For longer lenses or flashes, attach the divider vertically to use the full depth of the bag.



- 4 Keep your everyday accessories in the top compartment.

Kata's 123-G0-30 Sling Backpack, part of the Digital Photo Series (**DPS**), fits a DSLR with battery grip & long-range zoom lens attached as well as, 5-6 lenses, flash + personal gear.. This bag is super light, features TST structural protection and provides ultimate freedom of use in three carrying possibilities, morphing rapidly from sling to backpack and back again.

① TST Rib for additional protection

② Padded divider system

③ Top compartment for personal accessories


④ Fast release buckles for quick draw

⑤ Accessory pocket

⑥ Elements Cover

⑦ Tab to secure equipment

⑧ Quick draw tab

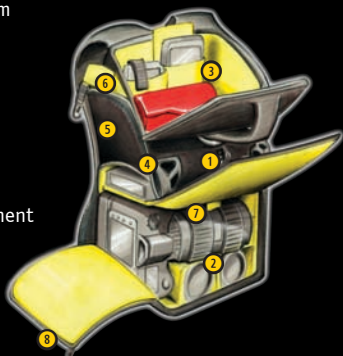

Includes:
Element Cover
Divider Set

123-G0-30	External Max. Size		Internal Main Compartment	
Length	12.6"	32 cm	11.6"	29.5 cm
Width	7.5"	19 cm	6.3"	16 cm
Height	17.7"	45 cm	11.8"	30 cm
Weight	2.9 Lbs		1.3 Kg	



ON BOARD



ELEMENTS
COVER



TST RIB



INSERTROLLEY
COMPATIBLE

UPC Code



EAN Code



Made in China

Development & Production by KATA .

POB 45078 Jerusalem , Israel 91450

Tel: +972-2-5911000

Fax: + 972-2-5400504

Info: technical@kata-bags.com

PK290809

123-G0-30/7