

Ultimate Kit User Guide

Table of Contents	
Part 1, Parts list	03
Part 2, Using the 223 for AR15 SureStrike™	04
Part 3, Using the 9MM SureStrike™	06
Part 4, Installing Adapters: 40S&W, 45ACP.	09
Part 5, Pistol BoreSight	11
Part 6, Maintenance & Warranty	12

• It is recommended that you read the complete user guide before using your SureStrike!

WARNING: Firearms can cause serious injuries or death. Before any training session perform the following steps:

▲ Safety First

- · Unload the weapon.
- Physically and visually inspect the chamber, bore, and magazine well to ensure that all ammunition has been removed.
- Unload ammunition from any magazines that will be used in training.
- Store ammunition in an area that is separate from your training area.

02



about:blank 2/16


PART 1, PARTS LIST 12 11 7 10

- 1. Laser module 7. Short Safety Pipe
 2. Battery Pack 8. Safety nut
 3. 223 for AR15 action cap
 4. AR15 barrel adapter 10. 45ACP Adapter
 5. 9mm multi mode action cap
 6. Safety pipe extension 12. Carrying Case

M LASER AMMO

03

Part 2, Using the 223 for AR15 SureStrike™cartridge

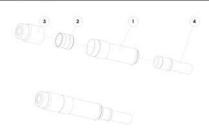

 $\ensuremath{\Delta}$ Always personally verify that all ammunition has been removed before training. Do not allow any live ammunition in the training area.

A. Assembly:

- 1. Take your laser module (1) and insert the battery pack (2) according to the drawing (flat side facing up).
- Take the <u>223 for AR15 action cap</u> (3) and thread it onto the laser module (1) with the battery (2) installed.
 Verify the threading is fully closed and that there is no gap.
- 3. Thread the barrel adapter (4) onto the front of the laser module (1).

04



4. Retract the bolt and engage the bolt stop in the open position. Make sure the bolt is held firmly by the stop. Do not continue if the bolt is not held firmly or the bolt stop is not in good working order.

- While pointing the barrel down, insert the laser cartridge into the firearm, barrel adapter (4) first, through the receiver (breach) opening into the chamber.
- 6. Still pointing down, release the bolt stop.
- 7. Point the weapon at a safe backstop and pull the trigger to verify that the unit is properly installed and functioning.

B. Disassembly:

- 1.Open the bolt and engage the bolt stop in the open position. Insert a cleaning rod, using a flat tipped attachment into the barrel from the front and gently push the laser cartridge out.
- Disassemble laser cartridge in the reverse order of assembly.

Remove battery when laser cartridge is not in use.



about:blank 5/16



NOTE: If the 223 barrel adapter (4) is installed on the end of the laser cartridge please remove it. It is not required for pistols.

A.Take your laser module (1) and insert the battery pack (2) according to the drawing (A). Take the 9mm multi mode action cap (5) and thread it onto the laser module (1) with the battery installed.

06



about:blank 6/16

Verify the threading is fully closed and that there is no gap.

- B. Open the action/slide and engage the slide stop in the open position. Make sure the action/slide is firmly held by the stop.
- AWARNING: Do not continue if slide is not held firmly or if slide is not in good working order.
- C. While pointing the barrel downward, insert the laser cartridge into the handgun by "dropping" it, laser first, through the slide opening into the chamber. Push it gently into the chamber.
- D. For barrel length between 2.8" to 4.1" continue to step E. For a longer barrel, connect the pipe extension (6) to the safety pipe (7) by threading them tightly together. If needed, a long safety pipe or additional extensions are available from LaserAmmo.
- E. While holding the handgun with one hand, insert the safety pipe (7) down the barrel. While pressing lightly on the back of the laser cartridge with one finger, thread the safety pipe (7) into the laser cartridge until you feel mild resistance. Do not over tighten the pipe.

M 07

about:blank 7/16

F. Screw the safety nut (8) onto the safety pipe (7) until it tightens against the barrel.

about:blank

NOTE: The safety nut may be reversed for a longer reach.

- · Release the slide stop.
- Point the handgun at a safe backstop and pull the trigger to verify the unit is properly installed and functioning.

Disassembly:

- 1. Remove the magazine if it is in place.
- Retract the action/slide and engage the slide stop in the open position. Make sure the action/slide is firmly held by the stop.
- 3. Press gently on the back of the laser cartridge with your finger and unscrew the safety nut (8).
- 4. Unscrew the safety pipe (7) and remove from the barrel.
- 5. Point the barrel up, while positioning your hand palm upward, under the magazine well.
- Take a wooden pencil with erase or similar soft object. Insert the pencil eraser side first, down the barrel from the front and gently push out the laser cartridge (1) from the chamber.

Remove battery when laser cartridge is not in use.

08

Part 4, Installing Adapters: 40S&W, 45ACP.



Threading Side

A. Installation:

NOTE: Only the 9mm action cap will work with the adapters! All adapters including revolver and shotgun (not included in this kit) use the 9mm action cap.

- 1. Remove the 9mm multi mode action cap (5) from the laser module (1).
- 2. Place the adapter (9 or 10) with the threaded end away from the laser module (1), on to the threaded end of the laser module (1).

Caution: Installing the adapter upside down will damage the threads.

3. Carefully engage the thread onto the laser module (1) and thread the adapter (9 or 10) down.

Caution: Do not use force.

- 4. Insert the battery pack (2) according to the drawing flat side up.
- 5. Take the 9mm multi mode action cap (5) and install it on the laser module (1) with the battery installed.
- 6. The 9mm multi mode action cap (5) will thread down to the adapter and hold it in place.
- Verify the threading is fully closed and that there is no gap.
- Once the adaptor is installed, the SureStrike[™] is used in the same manner as a 9mm Sure strike (Part 3) and will require the use of the safety pipe and nut.
- B. Disassembly: Reverse the assembly procedure.

10

Part 5, Pistol BoreSight -Using the 9mm Multi Mode action cap

The multi mode 9mm action cap supplied in the Ultimate kit can function as a Dry fire or Digital BoreSight action cap. It will not work in the AR-15.

Switching between Dry Fire and Digital BoreSight modes:



- 1. Take your laser module (1) and insert the battery pack (2) according to the drawing. Take the 9mm multi mode action cap only (5) and thread on to the laser module (1) with the battery (2) installed. Verify the threading is fully closed and that there is no gap.

 2. Continuously press the firing pad at the end of the action can After 7 seconds the laser will begin flacking.
- action cap. Áfter 7 seconds, the laser will begin flashing in a cycle of one and two flashes.
- 3. One flash indicates the Action Cap is set for Dry Fire mode and two flashes indicate BoreSight mode.
- 4. For Dry Fire mode stop pressing after one flash.
- 5. For BoreSight mode stop pressing after 2 flashes.
- 6. When in BoreSight mode, the SureStrike™ may be installed in the handgun and used for bore sighting. Pull your trigger once to turn it on, pull again to turn it

LASER AMMO

11/16 about:blank

Part 6, Maintenance & Warranty

The Laser cartridge is an electronic device and should always be treated as such. Store in original case.

- a. Remove battery pack when not in use.
- b. Wipe the Laser cartridge only with a soft fabric do not immerse in solvents or cleaning agents.
- Clean the laser lens using a glass cleaner and cotton swab.
- d. Lightly lubricate threading using gun oil.

Laser Ammo warrants that this product shall be free from material defects and defects in workmanship for the earlier occurrence of:

A period of one (1) year from the date of the purchaser's receipt of the product, or 5000 laser "shots", whichever occurs earlier. Notice of any warranty claim must be received by Laser Ammo, in writing, prior to the expiration of the warranty period.

12

Laser Ammo reserves the right to inspect the product before honoring the warranty.

Laser Ammo's warranty is limited solely to the above and applies only for the period set forth.

Laser Ammo will not be liable for any loss, damage, direct, incidental or consequential damages of any kind, whether based upon warranty, contract, negligence, or strict liability, or arising in connection with the sale or use of the product by the user or any third party.

Laser Ammo's warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, or modification.

This limited warranty does not apply to any product on which the original identification information has been altered, obliterated or removed.

LASER AMMO

about:blank 13/16

Laser Ammo will, at its sole option, either repair or replace any part of the product that proves defective by reason of improper workmanship or materials.

In all events, Laser Ammo's maximum liability to the purchaser related to any warranty claim or defect with respect to the product shall not exceed the contract price for the specific product claimed to be defective or unsuitable, or alleged to have been the cause of any damage to the purchaser or any third party.

The foregoing is in lieu of all other warranties, oral, expressed or implied, including, but not limited to, any implied warranties of fitness for a particular purpose.

The provisions of this section shall be applicable to both implied warranties (if any) and expressed warranties.

All firearms are potentially dangerous and can cause a great harm, personal injury and death. It is your responsibility and legal obligation to handle, load, unload, use, transport, maintain and store your rearm in a safe manner.

14

LASER AMMO


about:blank 14/16

No liability is expressed or implied for damage or injury as a result of installation or use of this product. Warranty is limited to the replacement or repair of the original product only.

Using the SureStrike $^{\!\top\!}$ Laser Cartridge not according to the user guide will void the warranty.

LASER AMMO

about:blank 15/16

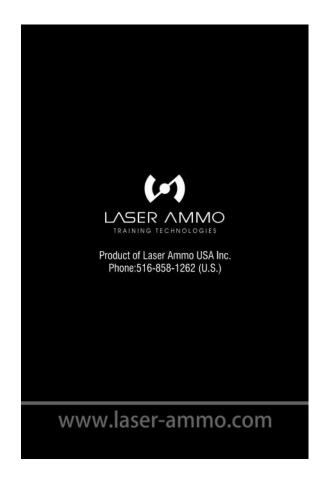

about:blank 16/16