



PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 620-670 nm, Class 3R laser

DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: One #123 battery; over twenty hours of illumination

ACTIVATION: Front-located integrated momentary pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Open cylinder and double check that cylinder is empty. (See "Four Basic Rules Of Firearm Safety" in Laser Sight Owner's Handbook.)
2. Remove factory grip panels.
3. Remove frame lug.
4. Place battery in the right side panel, with the positive end facing forward (toward muzzle).
5. Install the provided frame lug cap. (See Figure 1.) ***IF YOU HAVE A RUGER SUPER REDHAWK OR RUGER SUPER REDHAWK ALASKAN MANUFACTURED IN 2013 OR AFTER, YOU WILL NOT NEED THE FRAME LUG CAP.**
6. Match up halves to the frame, and install Lasergrips and removable insert panels using supplied hardware. Do not over tighten screws; this can damage grip hardware. Note: Stock Ruger wood insert panels may be used on adjustable rear sight models only.
7. Attach laser "Danger" sticker to outside of pistol.
8. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the bottom right side of the Lasergrips. Press pressure activation switch located in center of rubber front strap directly beneath trigger guard to activate the laser.
9. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post. Lasergrips are sighted-in at the factory, but can be fine-tuned for windage and elevation. (See Lasergrips Owner's Manual for complete sighting info.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Danger" warning label to the outside of the firearm.
- B. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.