



## AFG-2<sup>®</sup> ANGLED FORE GRIP



**WARNING**

**BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.**



**READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS.**




### AFG-2 Installation Instructions



#### STEP 1: REMOVE SLOTTED SCREW

Using a *flat-head screwdriver*, loosen and completely remove the *10-24 Slotted Screw*. If you want to change the *Finger Shelf*, see "Step A" before continuing.


**NOTE:** After removing the *10-24 Screw*, the *10-24 Hex Nut* on the opposite side will be loose. Take care not to lose the *Nut*.

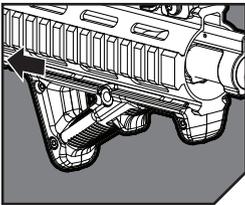

#### STEP 2: POSITION AFG-2 ON RAIL

After the *10-24 Slotted Screw* is removed, slide the *AFG-2* onto the rail, making sure there is a clear path for the *Slotted Screw* in Step 3. If the *AFG-2* is too snug to slide easily over the rail, use a *7/64" hex key* to loosen the three (3) *6-32 x 5/8" Socket Head Cap Screws*.

**▲ WARNING:** Install *AFG2* so it is entirely mounted on the handguard with the front of the fore-grip at least 3" rearward of the muzzle. Failure to do so may result in serious injury, burns, or loss of digits.

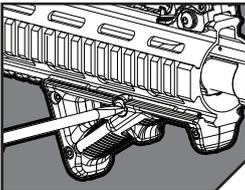


#### STEP 3: INSTALL AND TIGHTEN SLOTTED SCREW

When desired position is reached, reinstall the *10-24 Slotted Screw* and tighten with a *flat-head screwdriver*.

Retighten the three (3) *Socket Head Cap Screws* to 8-10 inch-lbs with a *7/64" hex key* if loosened in Step 2.

**NOTE:** Take care to not over tighten screws. Over tightening may result in damage to the *AFG2*.

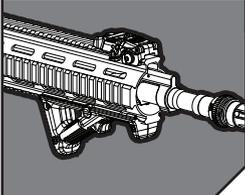


#### STEP 4: VERIFY INSTALLATION


Perform final inspection including a function check per *US Army TM 9-1005-319-23&P (3-18) Unit and Direct Support Maintenance Manual* to verify correct installation.

If you experience any issues during installation, please go online to [www.magpul.com](http://www.magpul.com) for further information.

**Always test fire your weapon before using it in an operational environment.**

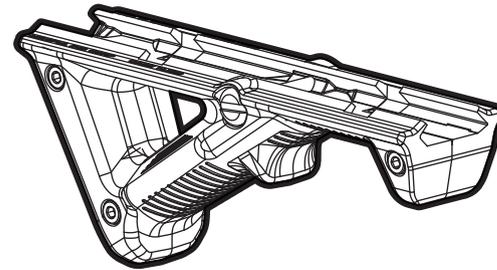


### AFG-2 Finger Shelf Insert Install Instructions

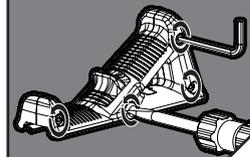


#### STEP A: REMOVE ALL FOUR (4) SCREWS

**NOTE:** Remove *AFG-2* from weapon before proceeding. Using a *flat-head screwdriver* remove the *10-24 Slotted Screw*. Once the *Slotted Screw* is removed, use a *7/64" hex key* to remove the remaining three (3) *6-32 x 5/8" Socket Head Cap Screws*.

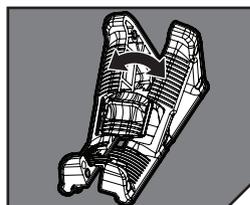


#### STEP B: SEPARATE TWO HALVES

Holding the *AFG-2* upside-down, "fold" the two halves outward to disengage locking mechanism, then pull apart. Use care not to lose the *Insert*.

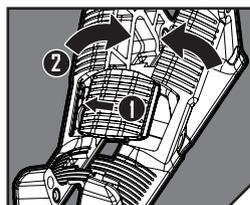

#### STEP C: POSITION INSERT

There are two (2) *Inserts* included with the *AFG-2*. The *Finger Shelf Insert* and the *Straight Insert*. To install, place the *Insert* into the appropriate groove. Each *Insert* may be installed in either direction to optimize the fore-grip for user preference. After installing the desired *Insert*, hook the *Locking Tabs* into the appropriate slots and "fold" inward. Hold and continue to Step D.

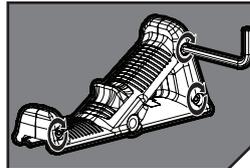

#### STEP D: RETIGHTEN SOCKET HEAD SCREWS

While holding the 2 halves together, insert the three (3) *6-32 x 5/8" Socket Head Cap Screws* and tighten using a *7/64" hex key* to 8-10 inch-lbs.

**NOTE:** Take care to not over tighten the *Socket Head Cap Screws*. Over tightening may result in damage to the *AFG2*.

After this is complete, proceed to Step 2 on the *Install Instructions*.