

PRIMARY ARMS®

Thank you for purchasing your new Primary Arms 4-16x44 scope!

The turrets lock when pushed all the way in. Pull up or out to adjust elevation and windage. Follow the instructions below to reset the turrets to the zero position.

After zeroing at the range remove turret locking screw with supplied Torx wrench. Remove the turret. They might be tight from the factory.



Relocate the turret to zero and replace. You might have to compress the tension ring with your other hand as you push down.



PRIMARY ARMS, LLC

2825 Miller Ranch Road Suite 213 - Pearland, Texas 77584

Contact us at: Phone: 713-344-9600 Email: info@Primaryarms.com