



ENHANCER 4X

SETUP GUIDE

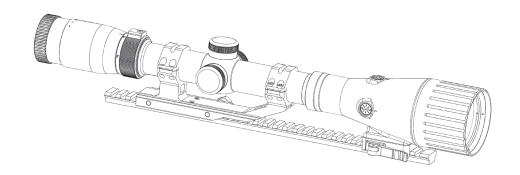

ongratulations on your purchase! The TRYBE™ OPTICS Enhancer
4x quadruples the power of most straight tube objective scopes by attaching to a picatinny rail. Simply install in front of your existing sighted-in riflescope, adjust the focus, and zero the Enhancer. Then just remove or replace to enhance your magnification with no further adjustments required.

 Here's what's included:





SPECIFICATIONS

| Magnification | 4x |
|------------------------|----------------------------------|
| Objective Lens | 54 mm |
| Outside Diameter | 65 mm |
| Focus Range | 20 y/m to infinity |
| Rail Mount | Picatinny |
| Rail Mount Height | 1.5 in |
| Adjustable Turrets | Yes, up to +/-10 MOA |
| Locking Turrets | Yes |
| Size | 6.13x3x2.6in / 155x75x65mm |
| Weight | 20.5 oz / 581 g |
| Assembly | Water-, fog-, and shock-proof |

 
INSTALL THE ENHANCER ONTO THE SCOPE (RAIL MOUNT)

The rail mount secures the Enhancer to a picatinny Rail. The mount centers the Enhancer 1.5" (38.1 mm) above the rail which should be compatible with many standard scopes.

Open the clamp on the rail mount and install onto rail as close to the objective

of your scope as possible. The rubber boot of the Enhancer should surround the scope.


Depending on the dimensions of your picatinny rail, it may be necessary to adjust the clamp tension on the rail. See page 4 for instructions.




ADJUSTING RAIL MOUNT TENSION

To adjust rail mount tension:

- Loosen small set screw on bottom of mount using 0.050" hex key
- 2. Adjust slotted screw until desired clamp tension is achieved
- 3. Tighten set screw

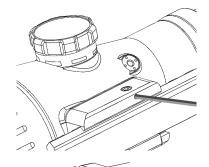

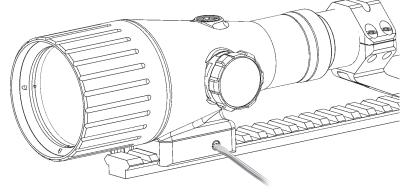


SIGHT IN YOUR ENHANCER

Turn the Enhancer focus knob while looking at the target to be used for boresighting and adjust the focus until the target is clear.

The Enhancer's adjustments are designed to provide horizontal and vertical movement of the point of impact to realign your already sighted-in scope. The graduation lines on the Enhancer's windage and elevation screws represent approximately 4 inches (or 4 MOA) at 100 yards. The infinite adjustment possible on the Enhancer ensures zero when sighting in.

The included coin fits in the adjustment slots perfectly and prevents common screwdriver scratches. Your existing riflescope's turrets never need to be adjusted unless you choose to.

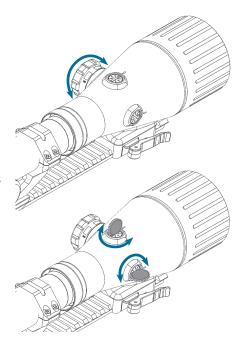


ENHANCER ADJUSTMENT LOCK

The Enhancer utilizes an adjustment lock to ensure no loss of zero under recoil.

Before adjusting the turrets on the Enhancer, remember to loosen this screw with the included 1/16" hex wrench, and to secure this screw when final zero is achieved


Snug this screw lightly with about 5 in/lb of pressure. Do not overtighten.

A cartridge type laser boresight may be utilized to shorten the sighting in process. Initial installation of the Enhancer may move your riflescope's existing zero by several inches or more, and recommended distance to target is 25 yards to start.

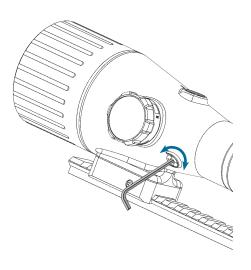

REMOVE OR REINSTALL ENHANCER LENS

 Once the Enhancer is aligned and zeroed to the riflescope, it can be removed and reinstalled using the rail mount. If reinstalled to the same location, the precision of the mount and the rail will correctly align and return the Enhancer back to zero without any further adjustment.



WARRANTY

TRYBE™ products are made for performance and durability and are covered by the **TRYBE™** warranty. For full warranty information please visit <u>www.TrybeDefense.com</u>. You can also reach out to our **TRYBE™** team at 1-800-511-4801 or by email at sales@trybedefense.com in order to process a warranty claim.

