

## Gen 2 Tactlite Adjustable Cheekrest Kit Installation



Warning:
When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

## **Parts List**



- A. Cheekrest
- B. Right/Left Mounts

#### **Hardware List**



- 1. Screw 6-19 x .875"
- 2. Screw 6-32 x 1/4" (4)
- 3. Nut 6-32 (4)

# Hex Nut to Mount Installation



Figure 1b



Begin by placing the (4) 6-32 hex nuts as seen in (Figure 1a) into the slots of the cheekrest mounts until seated as seen in (Figure 1b).

## Cheekrest Mount Installation Continued




Turn the stock over and attach the left side cheekrest mount into the pocket as seen in (Figure 2c) and snap into the pocket until seated as seen in (Figure 2d).

# Cheekrest Mount Installation



Begin by attaching the right side cheekrest mount into the pocket as seen in Figure 2a) and snap into the pocket until seated as seen in (Figure 2b).

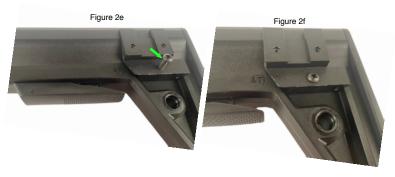

Using the provided 6-19 x .875" screw (1) as seen in (Figure 2e), thread the screw screw through the left side cheekrest mount and tighen using a phillips head screw driver as seen in (Figure 2f).



# Gen 2 Tactlite Adjustable Cheekrest Kit Installation



#### Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

## Cheekrest Installation



Take the cheekrest as seen in (Figure 3a) and slide onto the cheekrest mounts making sure the holes on the cheekrest line up with the cheekrest mount holes as seen in (Figure 3b).



Using the provided 6-32 x 1/4" screws (2) and the appropriate allen wrench, tighthen the left side of the cheekrest as seen in (Figure 3c). Turn the stock over and repeat the process to tighen the ride side of the cheekrest as seen in (Figure 3d).

> You're finished. Now enjoy your New Stock!

> > Add additional ATI Accessories to your Builds!