



# Universal (FN/FAL) Cheekrest

## Installation Instructions

**PART# UCR1900**

(Fits: FN/FAL and Wood/Synthetic Stocks)

**Advanced Technology**  
INTERNATIONAL

Thank you for purchasing an ATI product!



### Cheekrest Installation

**Point the rifle in a safe direction and place the safety in the "on" position. Next remove the magazine, pull back the bolt, and carefully inspect the chamber to be sure the rifle is unloaded.**

#### Step #1

Tape the cheek rest onto the stock to determine the correct location of the cheek rest.



Figure 1

#### Step #2

Be sure the cheek rest holes are in the centerline of the stock, then mark the 2 holes with a punch, nail or marker.



Figure 2

#### Step #3

Drill the 2 marked holes using a 7/64" bit.



Figure 3

**NOTE: ATI is NOT responsible for broke drill bits.**

#### Step #4

Install the (2) #8 x 1-1/14" supplied screws, do not overtighten.

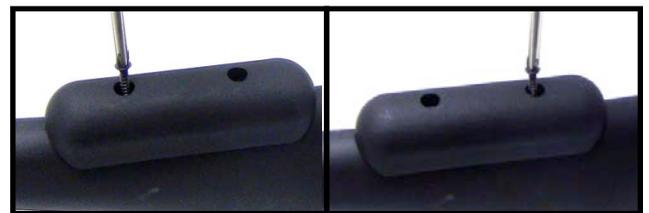


Figure 4

**Note: The use of wide velcro strips may be used as an alternative to drilling into the stock.**

Advanced Technology International • Made In the USA • Limited Lifetime Warranty

2733 West Carmen Ave • Milwaukee, WI 53209

Toll Free: 800.925.2522 • Fax: 414.464.3112