




# Hi-Lux, Inc.

3135 Kashiwa Street, Torrance, CA 90505, Tel: (310) 257-8142, Fax: (310) 257-8096

## HGB22MT INSTALLTION INSTRUCTION

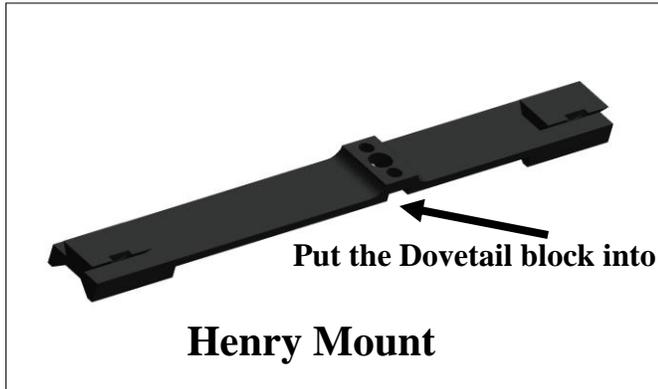

You need to install the dovetail block into the dovetail cut on the rifle first. Screw the center screw on the block down to jam the block into the cut, then to put the Henry Mount center slot on top of the dovetail block. Screw the two screws down from top of the Henry Mount into the dovetail block and make sure all the three screws are securely tightened. Now you can mount your short scope on

top of the Henry Mount. If you have any questions about this product, please feel free to contact us at the toll free no. 1-888-HI-LUX-12 (445-8912) or send us an e-mail to [techsupport@hi-luxoptics.com](mailto:techsupport@hi-luxoptics.com).

### WARNING:

**You must install the mount securely before you shoot the rifle. This should be done by a competent gunsmith.**