

# SCALARWORKS®

S H O O T E R D R I V E N®

## LEAP/13

OWNER'S MANUAL



Questions?

[EMAIL SUPPORT](#)

# ASSEMBLY

01.


Dry fit optic to mount to ensure proper alignment and fit.



# ASSEMBLY


02.

Insert screws while applying minimal pressure to avoid cross-threading.

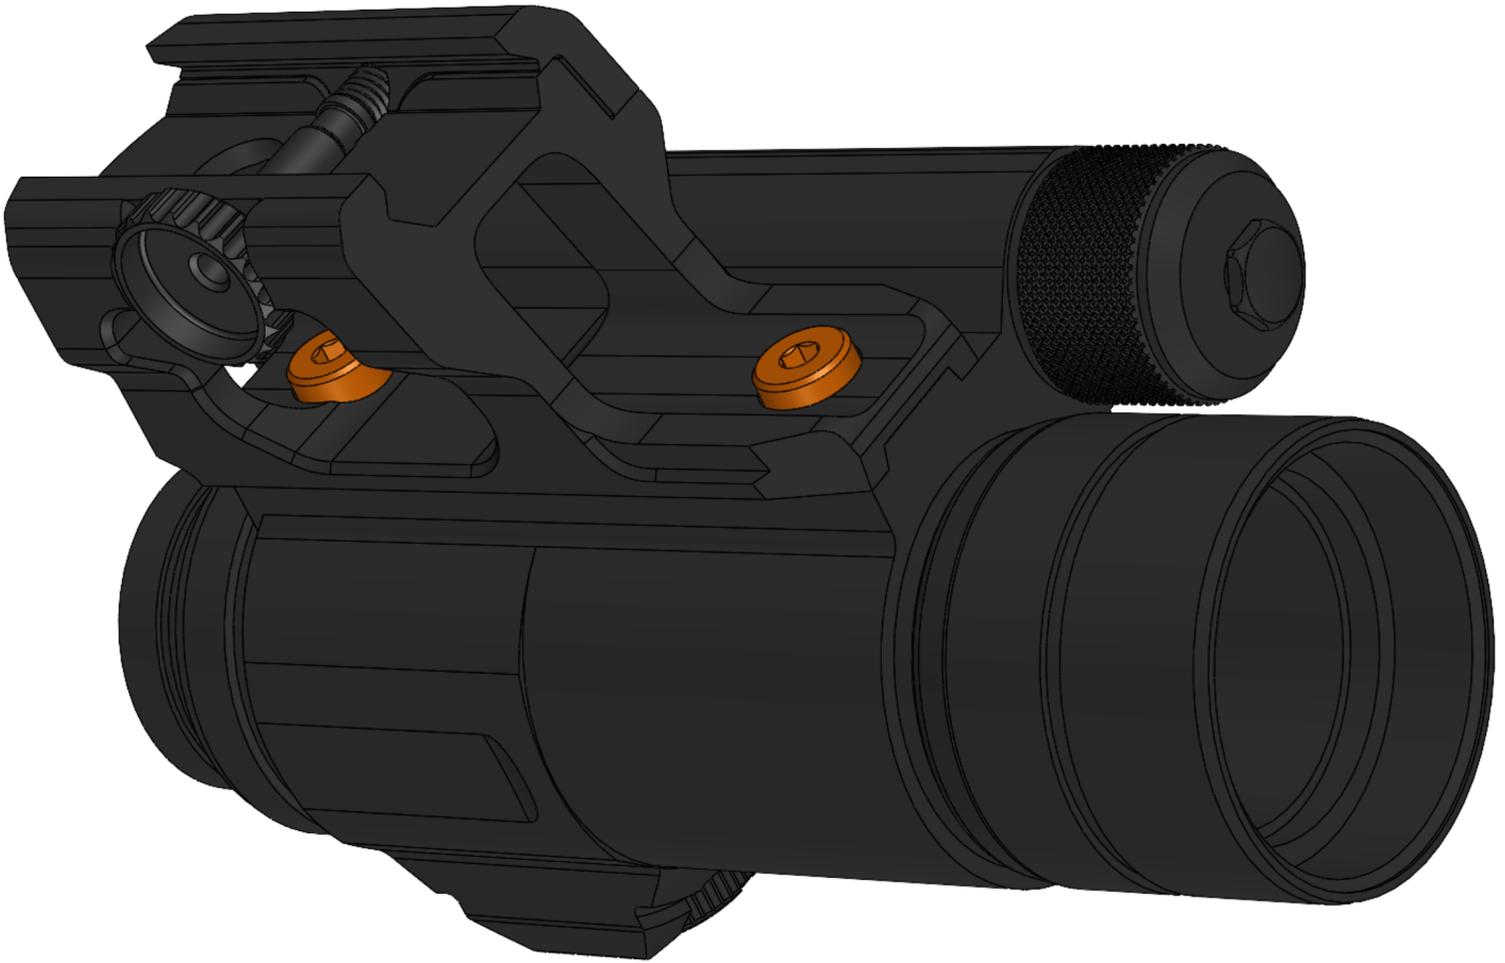

03.

Progressively tighten each screw while firmly pressing driver bit into 3MM Hex socket

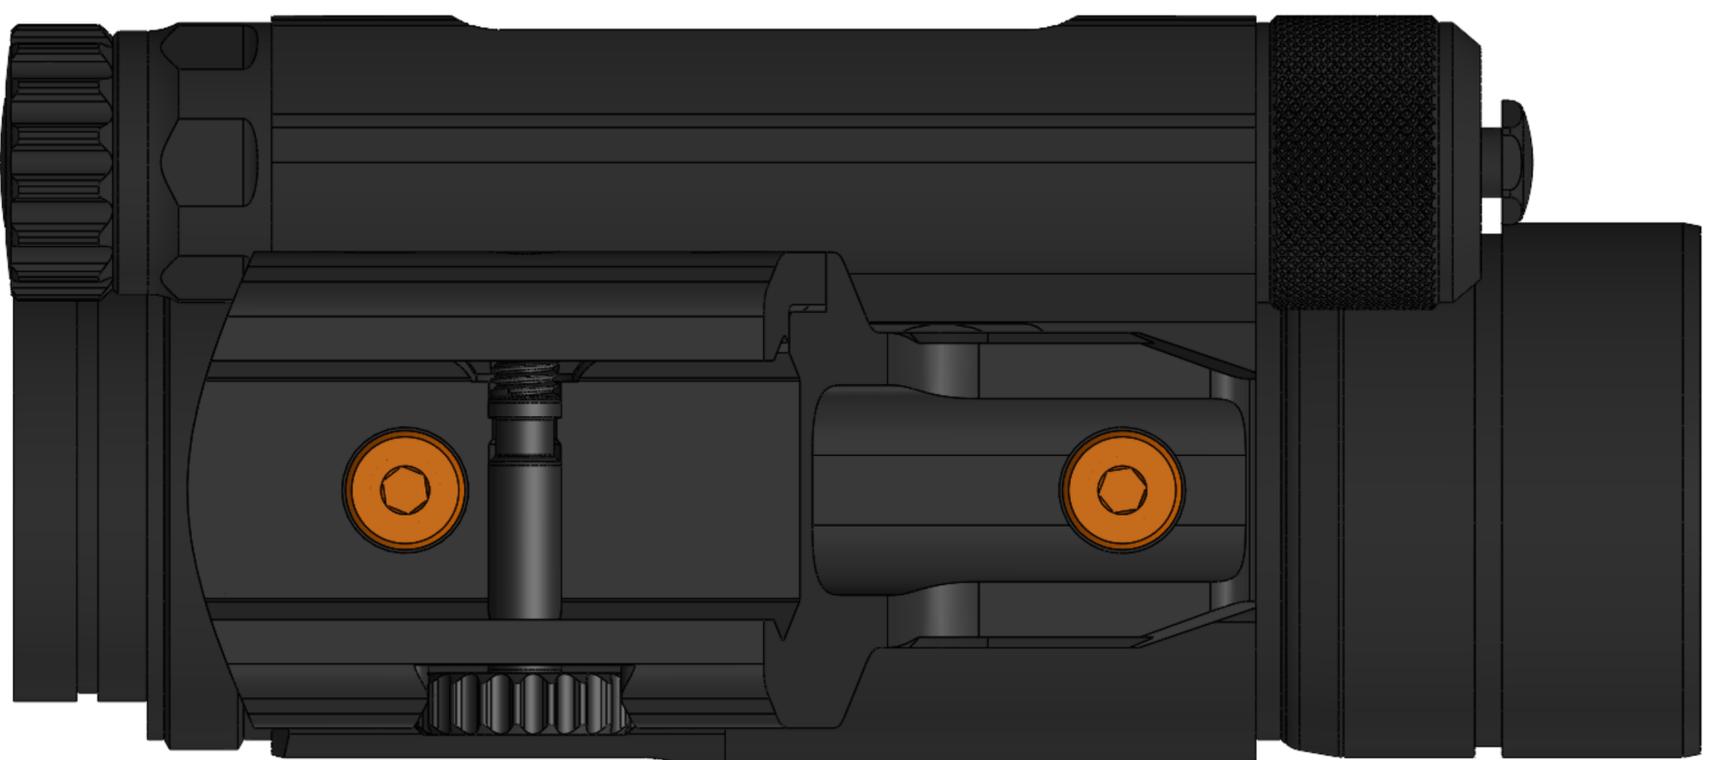

**18 INCH-LBS MAX**

# INSTALLATION



**UNLOAD & MAKE WEAPON SAFE**

**01.**

Open clamp no further than internal stops allow to prevent clamp from wedging itself open.



**02.**

Hook Leap mount onto rail from ClickDrive Side and rock onto rail.



# INSTALLATION



**UNLOAD & MAKE WEAPON SAFE**

**03.**

Close clamp by turning ClickDrive wheel clockwise as tightly as you can (Do not use tools).



**PRO TIP**

**USE YOUR RIGHT HAND TO TIGHTEN AND LEFT HAND TO LOOSEN**