

SCALARWORKS®





UNLOAD & MAKE WEAPON SAFE




01.

Verify correct optic screw length by fitting optic to mount before attaching to shotgun.

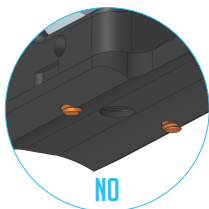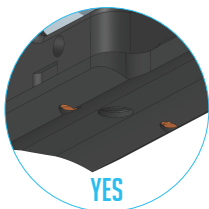

02.

Attach optic to Sync using **A** screws.

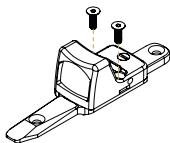


15 INCH-LBS

MAX TORQUE

03.

Attach **B** screws to receiver then slide Sync over **B** screws to engage key slots.

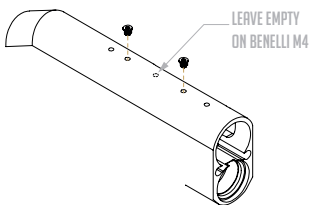


ADJUST B SCREWS TO KEY-SLOT HEIGHT

PRO TIP

04.

Fasten Sync to receiver using **C** screws.

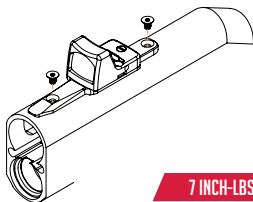

7 INCH-LBS

MAX TORQUE