


# INSTALLING SKB DOOR POUCHES ON SHOCKRACK SYSTEMS

SKB pouches are available



Tools you'll need to have:  
Rivet tool with 1/8" nosepiece, Drill with 13/64" bit

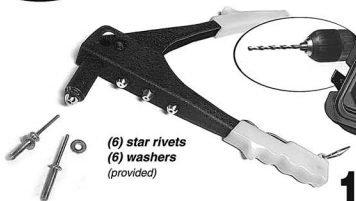

(6) star rivets  
(6) washers  
(provided)

**1** Remove rack door and place on a solid flat surface



3SKB-BB61

in 3 sizes. Follow these



3SKB-BB60

basic instructions to



3SKB-BB62

attach any size pouch.



**2**

Position pouch inside door (zipper side up). Unzip pouch to reveal six grommeted holes.



**3**

Carefully drill through all six holes, penetrating only the inner wall of the double walled door.



**4**

Load rivet tool with rivet and washer and insert through pouch and into rack door.



**5**

Complete rivet installation using rivet tool and repeat for all six holes. Return the door with pouch attached to Shockrack System.

