


# WeatherTech®

---

## ClosetMat

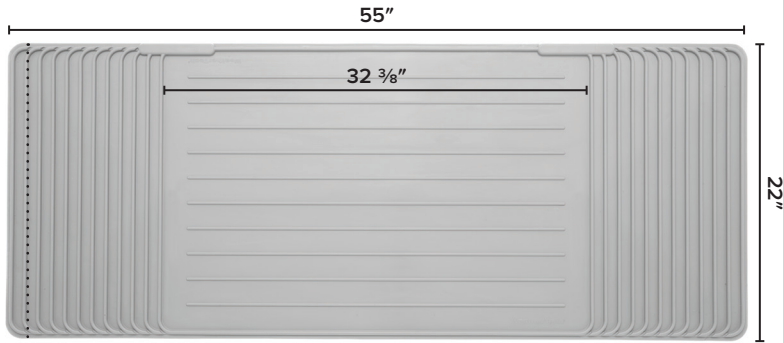


✂ Trimmable lines in 1" increments

### INSTALLATION




Clear all items from the base of your closet and, using a measuring tape, measure its width and then note it below.

Width: \_\_\_\_\_

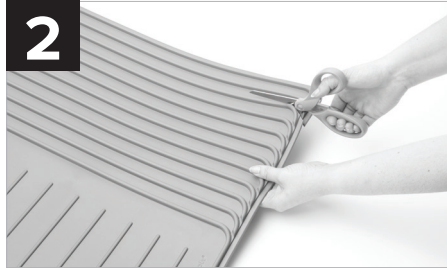

Lay the ClosetMat on a flat surface and find the measurement you need based on your closet width. Using a sharp pair of household scissors, trim the ClosetMat.

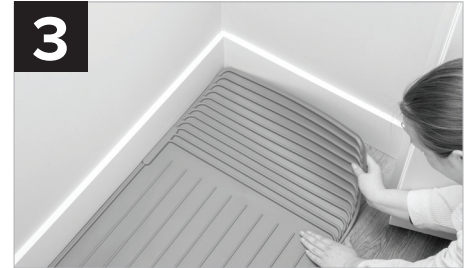

Place ClosetMat on the floor of your closet.

### CARE



Using a mild detergent, warm water and a damp cloth, wipe off any lingering debris.



For best results, and to maximize the longevity of your ClosetMat, use WeatherTech's specially formulated TechCare® FloorLiner™ and FloorMat Cleaner.



**DO NOT** clean with harsh chemicals or apply silicone-based cleaners. Allow to air dry or wipe down with a dry cloth.



(630) 769-1500  
[weathertech.com/warranty](https://www.weathertech.com/warranty)



Made in USA

67CLM01

© 2023 MacNeil IP LLC