




HOW IT WORKS

Once activated the power indicator will cycle colors, press the button until the desired color is shown.

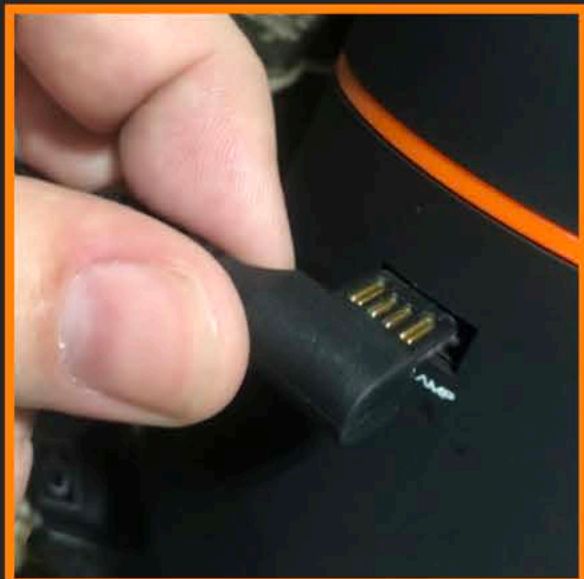


CONNECT POWER SUPPLY

Plug the USB cable in the front right pocket into a 5V/2A power bank, the light will blink white.*



PRESS FOR 3 SECONDS TO ACTIVATE

The light will begin to cycle colors, press the button again to pick your desired heating level.

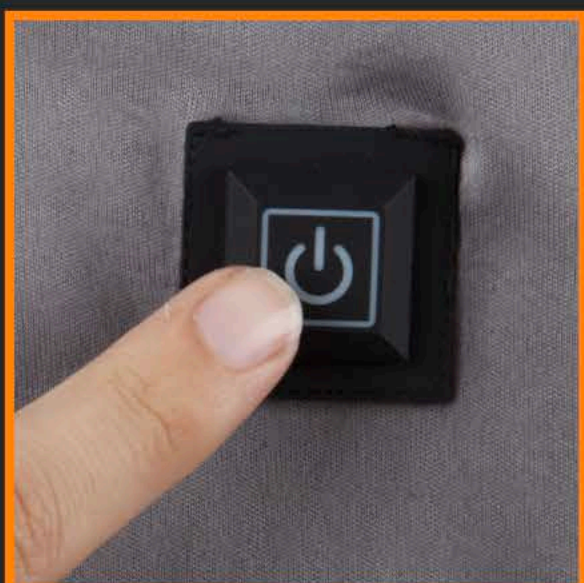

PRESS FOR 3 SECONDS TO DEACTIVATE

The vest will automatically turn off after 45 minutes of use or by pressing the button. Unplug the power bank.

HOW WARM DO YOU WANT TO BE?

Once activated the power indicator will cycle colors, press the button until the desired color is shown.



LOW (100°-107° F)



MID (107°-113° F)



HIGH (113°-118° F)

** Power bank not included*

Operating Instructions

- The vest will automatically turn off after 45 minutes of continuous use.
- The highest temperature output may be affected by the condition of clothing.

Safety Precautions

1. The power supply is **not included** with this product. Use a safety certified power supply with the vest.
2. In case of malfunction or failure, stop all use of the product immediately and disconnect the power supply.

Otherwise electric shock, fire or smoke may occur.

If any of the below occur, immediately stop operation, disconnect the power plug and contact ScentLok for a check or repair:

- *Movement of the power supply stops operation*
- *Abnormal noise or vibration is observed during operation*
- *Product becomes abnormally hot or burning smell is observed*
- *Power button becomes unresponsive to the touch*
- *If user experiences discomfort during use*

3. Do not use an overloaded power supply and do not use a power supply other than what is specified.
4. Do not do anything that may damage the USB plug on the vest.
5. When in use, store power supply in the front pocket and zip closed.
6. Make sure the product is away from any flames, fire or any organic solvents.
7. Make sure all the components are completely dry before use.
8. Make sure to remove the power supply after use and before storage.
9. Before washing, completely disconnect & remove power supply. Place the USB cable inside the pocket with the hook and loop taped and zip shut.
10. User discretion is advised, including those who may have a fever over 100°F, be pregnant, or have a history of hypertension, cardiovascular disease, skin dysfunction, or abnormal skin conditions.